

# STEP-BY-STEP GUIDE TO INSTALLING CIVIC ROBE DOORS

## YOU WILL NEED

### Tools

1. Screwdriver
2. Drill
3. Measuring tape
4. Silicone gun

### Materials (Included in Pack)

1. Self drilling screws
  - a. Button head for tracks
  - b. Bugle head for door stops
2. Silicone
3. Track end caps
4. Door stops



## SUPPLIED

- **Wardrobe Doors:** Ready for installation
- **Tracks:** Top track and bottom track
- **Installation Pack:** Includes all the screws, silicone, end caps, and door stops you need
- **ONLINE Installation Guide:** Simple, step-by-step instructions to help you install your doors - video and printable: [civicscreens.com.au/RobeDoorsInstall](https://civicscreens.com.au/RobeDoorsInstall)



CIVIC WARDROBE DOORS  
INSTALLATION INSTRUCTIONS

# STEP-BY-STEP GUIDE TO INSTALLING ROBE DOORS

## INSTALLING THE TOP TRACK

01

### ATTACH END CAPS

PLACE THE END CAPS ON BOTH ENDS OF THE TOP TRACK (THESE ARE INCLUDED IN THE PACK).



02

### APPLY SILICONE

RUN A THICK LINE OF SILICONE (INCLUDED) ALONG THE **UNDERSIDE** OF THE TRACK.

**PRO TIP:** PRE DRILL YOUR SCREW HOLES IN THE TRACK TO HELP WITH STABILITY WHEN SCREWING THE TRACK IN PLACE!



03

### POSITION THE TOP TRACK

HOLD THE TOP TRACK AGAINST THE TOP OF THE WARDROBE OPENING, MAKING SURE IT IS STRAIGHT AND ALIGNED WITH THE EDGE OF THE FRAME (JAMB).

**NOTE:** MAKE SURE THERE IS ENOUGH SPACE SO THE TRACK ISN'T TOO CLOSE TO THE TOP SHELF.




04

### SCREW THE TRACK IN

USE THE BUTTON HEAD SCREWS PROVIDED TO ATTACH THE TOP TRACK. START BY SCREWING AT EACH END AND THEN IN THE MIDDLE.

**NOTE:** LEAVE SPACE AT ENDS FOR DOORSTOPS. IF THE SPACE IS WIDER THAN 2400MM, ADD SCREW/S BETWEEN THE EXISTING ONES: MINIMUM 500MM APART.

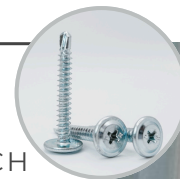


05

### FIT DOORSTOPS: IF NEEDED

PLACE A DOOR STOP ON EACH SIDE - ONE ON THE FRONT TRACK AND ONE ON THE BACK TRACK - TO PREVENT THE DOORS FROM CLOSING THE WRONG WAY. USE THE BUGLE HEAD SCREWS TO SECURE THEM.

**NOTE:** FRONT DOOR IS CLOSEST TO THE ROOM ENTRANCE, DOORSTOP GOES ON THE OPPOSITE SIDE.

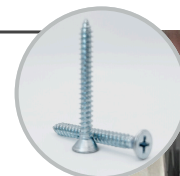


# STEP-BY-STEP GUIDE TO INSTALLING ROBE DOORS

## INSTALLING THE BOTTOM TRACK

01

### PREPARE THE FLOOR - ALL FLOOR TYPES

CLEAN THE FLOOR WHERE THE BOTTOM TRACK WILL GO. IT NEEDS TO BE FREE OF DUST OR DEBRIS.

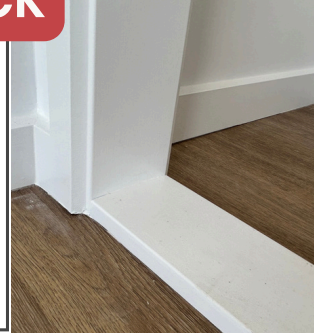

02

### ATTACH END CAPS


PLACE END CAPS ON BOTH ENDS OF THE BOTTOM TRACK.



03

### APPLY SILICONE

RUN A THICK LINE OF SILICONE (INCLUDED) ALONG THE **UNDERSIDE** OF THE TRACK. APPLY IT TO BOTH CHANNELS WHERE THE DOOR WHEELS WILL ROLL.

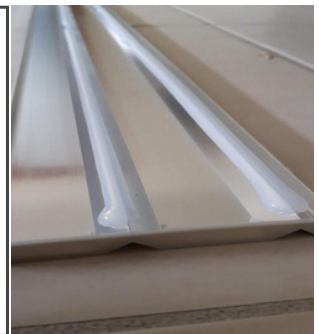

04

### POSITION AND FIX THE TRACK


STICK THE BOTTOM TRACK TO THE FLOOR, MAKING SURE IT'S ALIGNED WITH THE TOP TRACK AND THE FRAME. THE WIDE PART OF THE TRACK SHOULD FACE THE FRONT.



05

### IF FLOORPLATE/ JAMB IN PLACE: OPTIONAL

SCREW THE TRACK TO THE FLOOR JAMB AT EITHER END AND IN THE MIDDLE, USING THE BUTTON HEAD SCREWS. **NOTE:** IF THE SPACE IS WIDER THAN 2400MM, ADD AN EXTRA SCREW BETWEEN THE EXISTING ONES.

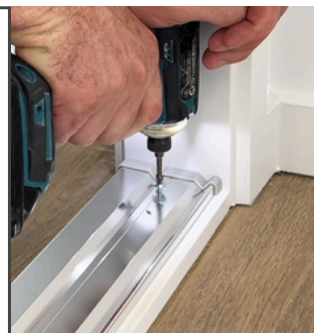


# STEP-BY-STEP GUIDE TO INSTALLING ROBE DOORS

## INSTALLING THE DOORS

01

### ADJUST THE WHEELS

THE WHEELS ON THE DOORS NEED TO BE ADJUSTED SO THEY DON'T SCRAPE THE BOTTOM TRACK. USE A SCREWDRIVER TO ADJUST THE WHEELS UP OR DOWN.

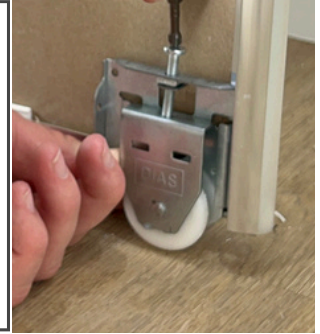


02

### LIFT AND PLACE THE DOORS

START BY LIFTING THE TOP OF THE DOOR INTO THE TOP TRACK, THEN LOWER THE BOTTOM WHEELS ONTO THE BOTTOM TRACK.

**NOTE:** NO NEED TO WAIT, INSTALL YOUR DOORS STRAIGHT AWAY

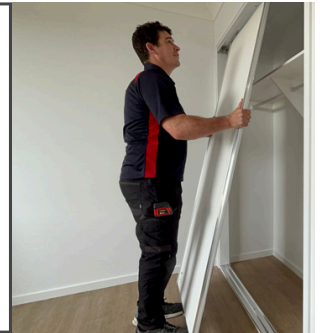

03

### CHECK THE BUMP STRIP

MAKE SURE THE RUBBER STRIP ON THE EDGE OF THE DOOR IS IN PLACE AND TRIMMED TO THE SAME LENGTH AS THE DOOR.



04

### ADJUST THE DOORS

CLOSE THE DOORS AND CHECK THAT THEY ARE EVEN AND ALIGNED WITH THE FRAME. USE A SCREWDRIVER TO ADJUST THE WHEELS UNTIL THE DOORS SIT FLUSH AGAINST THE JAMB WHEN CLOSED.



05

### TEST THE DOORS

SLIDE THE DOORS BACK AND FORTH TO ENSURE THEY MOVE SMOOTHLY.

